



MOTORS

Repair Instruction

DR 612 Series Motor Brake



together in motion

White is a leading global provider of
motor and steering solutions that power
the evolution of mobile and industrial
applications around the world.



Contents

Chapter 1 Motor Brake disk replacement (GENIE PART # W80535)	4
Disassembly	5
Assembly	6
Parts list	9
Chapter 2 Motor Brake disk replacement (GENIE PART # PW80506)	10
Disassembly	11
Assembly	12
Parts list	15
Figures	16
Tables	16

Chapter 1

Motor Brake disk replacement (GENIE PART # W80535)

Topics:

- *Disassembly*
- *Assembly*
- *Parts list*

Note

*For Use With Seal Kit(s): 60080535
dimensions: mm [in]*

Disassembly

- A. To aid in reassembly of the motor, make a “V” shaped set of lines from the endcover to the housing using either paint or a marker. With shaft facing down, secure motor in vise by clamping on to housing (15).
- B. Loosen and remove seven bolts (34) holding motor assembly together. Remove endcover (32) carefully as piston (30) and spring (31) may fall out. If piston does not come out, carefully pry piston (30) out of endcover (32) and lay aside. Remove O-Ring seal (13) and backup seal (14) from endcover and discard seals. Remove spring (31) and lay aside.
- C. Lift commutator container and commutator (29) from motor and lay aside. Place the commutator on a flat, clean surface with the seal (12) facing up. Place the tip of a small screwdriver on the seal (12) and gently tap until the opposite side of seal lifts from groove. Remove seal (12) and discard.
- D. Remove manifold (28) and rotor set (27). Remove all seals (10 & 11) from components and discard. (Caution- Do not allow rolls to drop from rotor assembly (27) when removing rotor assembly from motor.) Remove drive link (26) from motor and lay aside.
- E. Put the housing assembly into an arbor press with the shaft facing down. Lower the press to apply downward pressure on the rear housing (23) and lock the press in place. Loosen and remove the eight capscrews (24) holding the rear housing (23) to the front housing (15). Slowly release the press to allow spring pressure to push the rear housing (23) from the front housing (15). Remove the rear housing (23) and lay aside. (NOTE: Bearing (16) and spacer shim(s) (22) may fall out of rear housing (23).) If no arbor press is available, place front housing in a vise with pilot on housing facing down. Remove the eight capscrews, turning each screw 2 turns following the bolt pattern shown in figure 2 until the springs are fully released. Then remove all screws.
- F. Remove springs (21) and shim (33) from front housing (15) and lay aside. Remove housing (15) from arbor press and place on a clean, flat surface with output end of shaft (35) facing up. To remove piston (20), friction disks (17) and disk stampings (18 & 19), firmly grasp output end of shaft with a rag. Raise housing assembly a few inches above work surface and firmly strike housing assembly on work surface until piston and disks drop from housing assembly. Lay piston (20) and disks (17, 18 & 19) aside.

Note

At this point, all parts should be cleaned in an oil-based solvent and dried using compressed air (For safety, observe all OSHA safety guidelines). All new seals should be lightly coated in clean oil prior to installation.

Assembly

- A. Before installing the new disk assembly, sort the disk stampings (18 & 19) by measuring the thickness. The disk stampings come in thicknesses of 1,8 [.072] and 2,4 [.095]. Eleven 1,8 [.072] disk stampings and one 2,4 [.095] disk stamping will be required for the disk assembly. Begin the installation by placing one 2,4 [.095] disk stamping (19) into housing making sure that lugs or splines engage those in housing (15). Install one aluminum disk (17) engaging splines on disk with those on shaft. Alternate 1,8 [.072] disk stampings (18) and friction disks (17) until all disks and disk stamping (18) are installed.
- B. Install small O-Ring seal (5) and large O-Ring seal (7) into corresponding grooves in piston (20). Install small seal (6) and large seal (8) in corresponding grooves over O-Ring seals. Thoroughly coat seals and sealing surfaces of housing (15) with clean oil. With large O.D. side of piston (20) facing up, install piston (20) into housing (15) and evenly press piston down making sure not to pinch seals. Firmly press the piston down to seat all components. Install shim (33) on top of piston. Then, using Figure 1 as a reference, measure the stack up of the assembly. The measurement must be between 15,1 - 15,4 [.595 - .607]. If the measurement is not within these specifications, remove the piston (20) from the housing, remove the top 1,8 [.072] disk stamping and install a 2,4 [.095] disk stamping to bring the measurement within the specifications. Reinstall the piston, firmly press it down and remeasure the stack up of the assembly to see that measurement falls within the specifications.
- C. Install springs (21) on top of shim. Install O-Ring Seal (9) in rear surface of housing (15). If rear shaft bearing (16) and spacer shim(s) (22) came out of rear housing (23), reinstall at this time by placing spacer shim(s) (22) into rear housing (23). Install rear shaft bearing (16) making sure that snap ring that retains bearing rolls faces out. While holding bearing into rear housing, place rear housing (23) onto front housing (15) lining up bolt holes. While holding the motor assembly together, remove the motor assembly from vise and place in arbor press. Press down on rear housing (23) until it contacts front housing (15) and lock press. Install eight capscrews (24) and torque to 61 Nm [45 ft. lbs.]. If no arbor press is available, place front housing in a vise with pilot on housing facing down. Screw in the (8) capscrews until they engage the threads in the housing (15). Then turn each screw 1/2 turn at a time following the bolt pattern shown in figure 2 to evenly tighten down the rear housing (23) until it contacts the housing (15). Then torque the screws to 61 Nm [45 ft. lbs.].
- D. Install drive link spacer (25) in shaft. Install drive link (26) into end of shaft with tapered end facing up. Place body seals (10) in grooves in both sides of rotor (27). Place rotor (27) onto rear housing (23) with side of rotor with chamfer in splines facing rear housing (23). Place manifold (28) over rotor (27) with seal groove side up. Install manifold seal (11).
- E. Install the commutator seal (12) into the commutator (29) with the metal side facing out. Use finger pressure to press the seal down flush with the surface of the commutator. Place the commutator container onto the manifold (28) and then place the commutator onto the protruding end of the drive link (26) making sure that the seal side faces up.
- F. Install the remaining body seal (10) in the groove in the face of the endcover (32). Install piston spring (31) into endcover (32), then the white backup seal (14) followed by the O-Ring seal (13). Lining up the alignment pin with the hole in the endcover, press piston (30) into the endcover (32). While holding the piston (30) in the endcover, lower the endcover assembly onto the motor. Check to make sure that the endcover ports are in their original position.
- G. Install the seven assembly bolts (34) and pre-torque to 13.6 [10 ft. lbs.]. Final torque all bolts to 67.8 Nm [50 ft. lbs.] using the bolt torque sequence shown in Figure 3.

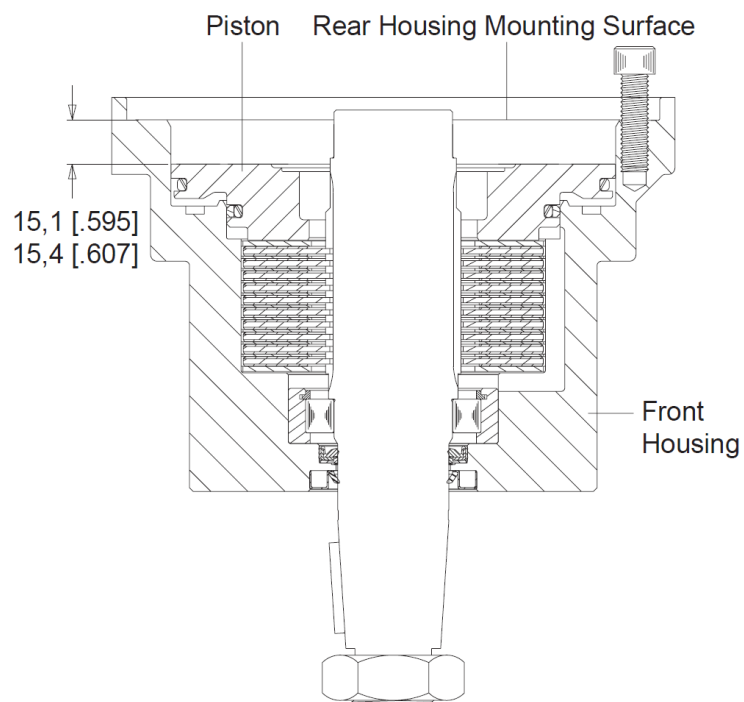


Figure 1

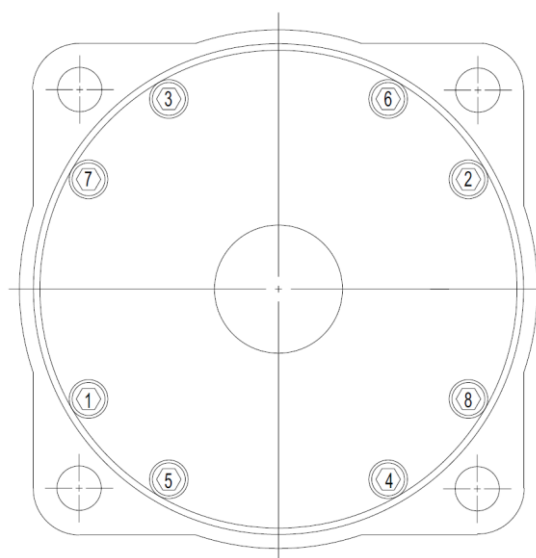


Figure 2

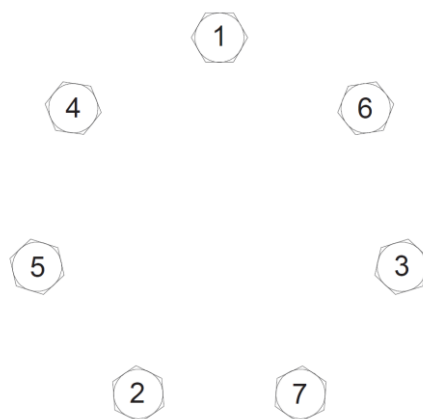


Figure 3

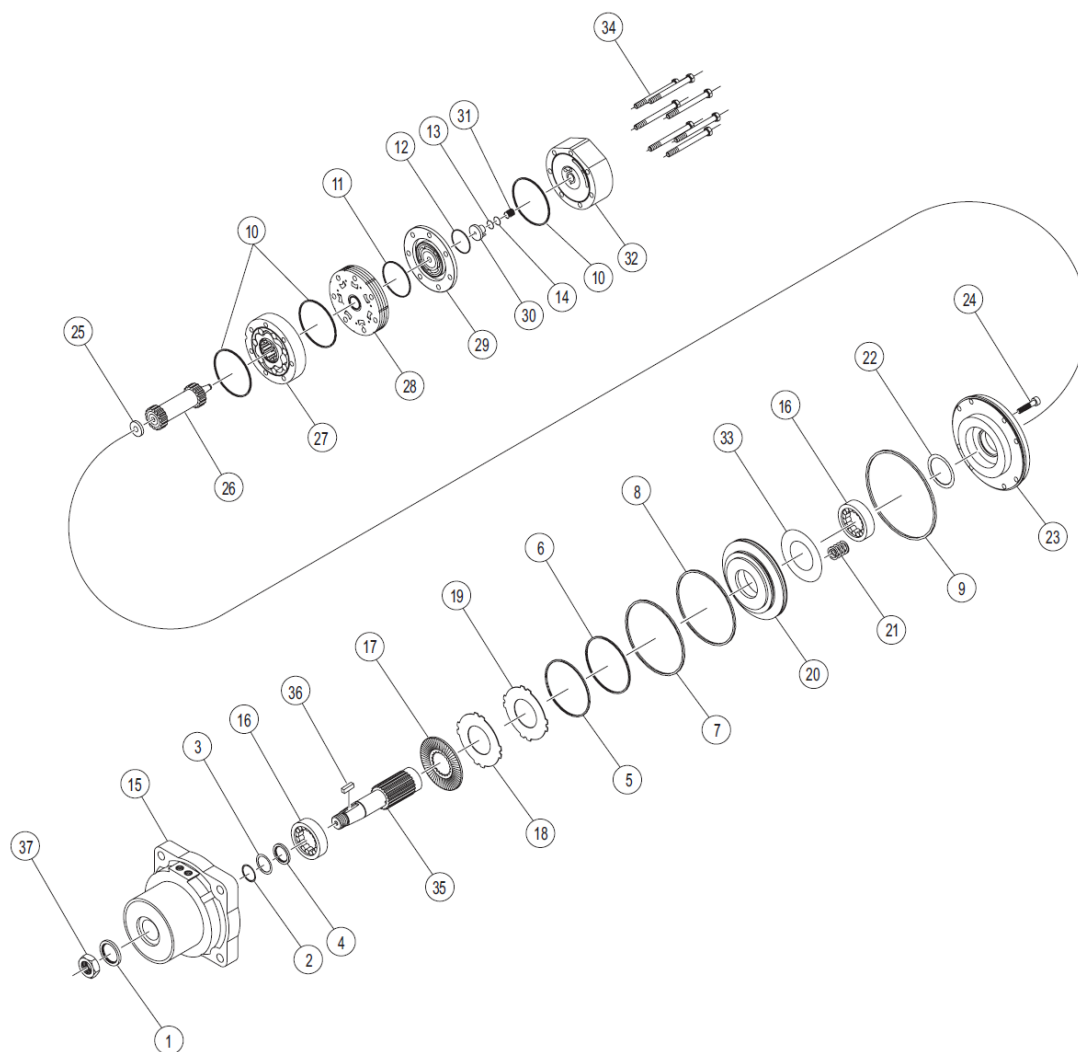


Figure 4 Exploded view

Parts list

Pos.	Part name
1	Dust Seal
2	Metal Backup Shim
3	Backup seal
4	Shaft Seal
5*	Small Piston O-Ring Seal
6*	Small Piston Seal
7*	Large Piston O-Ring Seal
8*	Large Piston Seal
9*	O-Ring Seal
10*	Body Seals (3)
11*	Manifold Seal
12*	Commutator Seal
13*	O-Ring Seal
14*	Backup Seal
15	Housing
16	Shaft Bearing
17*	Friction Disks (11)
18*	Disk Stampings (11) (.072)
19*	Thick Disk Stampings (2) (.095)
20	Piston
21	Springs (25)
22	Spacer Shims (1-3)
23	Rear Housing
24	Capscrews (8)
26	Drive Link
27	Rotor Assembly
28	Manifold
29	Commutator Assembly
30	Endcover Piston
31	Piston Spring
32	Endcover
33	Shim
34	Assembly Bolts (7)
35	Shaft
36	Shaft Key
37	Shaft Nut
* Contained in seal kit 60080535	

Table 1 Parts list

Chapter 2

Motor Brake disk replacement (GENIE PART # PW80506)

Topics:

- *Disassembly*
- *Assembly*
- *Parts list*

Note

For Use With Seal Kit(s): PW80506
dimensions: mm [in]

Disassembly

- A. To aid in reassembly of the motor, make a “‘I’ shaped set of lines from the endcover to the housing using either paint or a marker. With shaft facing down, secure motor in vise by clamping on to housing (15).
- B. Loosen and remove seven bolts (34) holding motor assembly together. Remove endcover (32) carefully as piston (30) and spring(31) may fall out. If piston does not come out, carefully pry piston (30) out of endcover (32) and lay aside. Remove O-Ring seal (13) and backup seal (14) from endcover and discard seals. Remove spring (31) and lay aside.
- C. Lift commutator container and commutator (29) from motor and lay aside. Place the commutator on a flat, clean surface with the seal(12) facing up. Place the tip of a small screwdriver on the seal (12) and gently tap until the opposite side of seal lifts from groove. Remove seal (12) and discard.
- D. Remove manifold (28) and rotor set (27). Remove all seals (10 & 11) from components and discard. (Caution- Do not allow rolls to drop from rotor assembly (27) when removing rotor assembly from motor.) Remove drive link (26) from motor and lay aside.
- E. Put the housing assembly into an arbor press with the shaft facing down. Lower the press to apply downward pressure on the rear housing (23) and lock the press in place. Loosen and remove the eight capscrews (24) holding the rear housing (23) to the front housing (15). Slowly release the press to allow spring pressure to push the rear housing (23) from the front housing (15). Remove the rear housing (23) and lay aside. (NOTE: Bearing (16) and spacer shim(s) (22) may fall out of rear housing (23).) If no arbor press is available, place front housing in a vise with pilot on housing facing down. To remove the (8) SHCS, turn each screw ½ turn following the bolt pattern shown in figure 6 until the springs are fully released. Then remove all screws.
- F. Remove springs (21) from front housing (15) and lay aside. Remove housing (15) from arbor press and place on a clean, flat surface with output end of shaft (35) facing up. To remove piston (20), friction disks (17) and disk stampings (18 & 19), firmly grasp output end of shaft with a rag. Raise housing assembly a few inches above work surface and firmly strike housing assembly on work surface until piston and disks drop from housing assembly. Lay piston (20) and disks (17, 18 & 19) aside. Remove shaft (35) from housing (15) and lay aside.

Note

At this point, all parts should be cleaned in an oil-based solvent and dried using compressed air (For safety, observe all OSHA safety guidelines). All new seals should be lightly coated in clean oil prior to installation.

Assembly

- A. Before installing the new disk assembly, sort the disk stampings (18 & 19) by measuring the thickness. The disk stampings come in thicknesses of .030 (.76mm), .050 (1,3mm), .070 (1,8mm). Nine .050 (1,3mm) disk stampings and three .070 (1,8mm) disk stampings will be required for the disk assembly. The disk stampings may be installed in any order as long as one .050 (1,3mm) disk is used last. Begin the installation by placing one disk stamping (18) into housing making sure that lugs or splines engage those in housing (15). Install one friction disk (17) engaging splines on disk with those on shaft. Alternate disk stampings and friction disks until all disks and disk stamping (19) are installed. Install the .050 (1,3mm) disk stamping lastly on top of disk assembly.
- B. Install small O-Ring seal (5) and large O-Ring seal (7) into corresponding grooves in piston (20). Install small seal (6) and large seal (8) in corresponding grooves over O-Ring seals. Thoroughly coat seals and sealing surfaces of housing (15) with dean oil. With large O.D. side of piston (20) facing up, install piston (20) into housing (15) and evenly press piston down making sure not to pinch seals. Firmly press the piston down to seat all components. Then, using Figure 5 as a reference, measure the stack up of the assembly. The measurement must be between .587 - .610 (14,9 - 15,5 mm). If the measurement is not within these specifications, remove the piston (20) from the housing, remove the top disk stamping and install a .030 (.76mm) or .070 (1,8mm) disk stamping to bring the measurement within the specifications. Reinstall the piston, firmly press it down and remeasure the stack up of the assembly to see that measurement falls within the specifications.
- C. Install springs (21) on top of piston. Install O-Ring Seal (9) in rear surface of housing (15). If rear shaft bearing (16) and spacer shim(s) (22) came out of rear housing (23), reinstall at this time by placing spacer shim(s) (22) into rear housing (23). Install rear shaft bearing (16) making sure that snap ring that retains bearing rolls faces out. While holding bearing into rear housing, place rear housing (23) onto front housing (15) lining up bolt holes. While holding the motor assembly together, remove the motor assembly from vise and place in arbor press. Press down on rear housing (23) until it contacts front housing (15) and lock press. Install eight capscrews (24) and torque to 45 ft. lbs. If no arbor press is available, place front housing in a vise with pilot on housing facing down. Screw in the (8) SHCS until they engage the threads in the housing (15). Then turn each screw 1/2 turn at a time following the bolt pattern shown in figure 6 to evenly tighten down the rear housing (23) until it contacts the housing (15). Then torque the screws to 45 ft. lbs.
- D. Install drive link spacer (25) in shaft. Install drive link (26) into end of shaft with tapered end facing up. Place body seals (10) in grooves in both sides of rotor (27). Place rotor (27) onto rear housing (23) with side of rotor with chamfer in splines facing rear housing (23). Place manifold (28) over rotor (27) with seal groove side up. Install manifold seal (11).
- E. Install the commutator seal (12) into the commutator (29) with the metal side facing out. Use finger pressure to press the seal down flush with the surface of the commutator. Place the commutator container onto the manifold (28) and then place the commutator onto the protruding end of the drive link (26) making sure that the seal side faces up.
- F. Install the remaining body seal (10) in the groove in the face of the endcover (32). Install piston spring (31) into endcover (32), then the white backup seal (14) followed by the O-Ring seal (13). Lining up the alignment pin with the hole in the endcover, press piston (30) into the endcover (32). While holding the piston (30) in the endcover, lower the endcover assembly onto the motor. Check to make sure that the endcover ports are in their original position.
- G. Install the seven assembly bolts (34) and pre-torque to 10 ft. lbs. Final torque all bolts to 50 ft. lbs. using the bolt torque sequence shown in Figure 7.

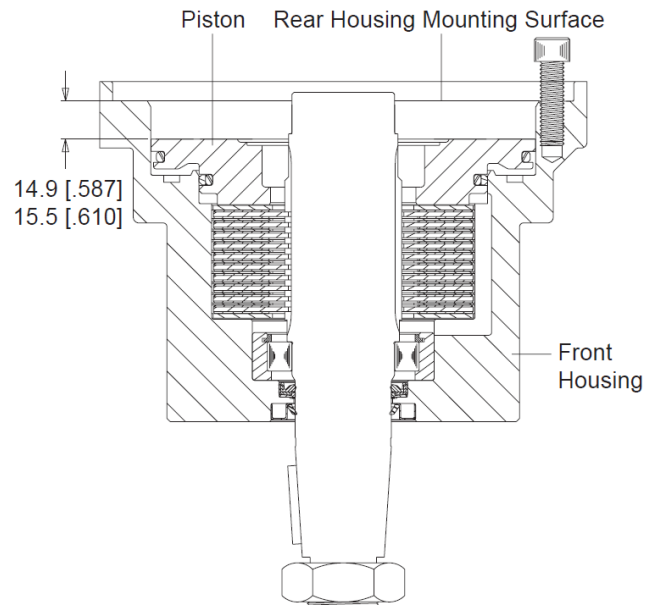


Figure 5

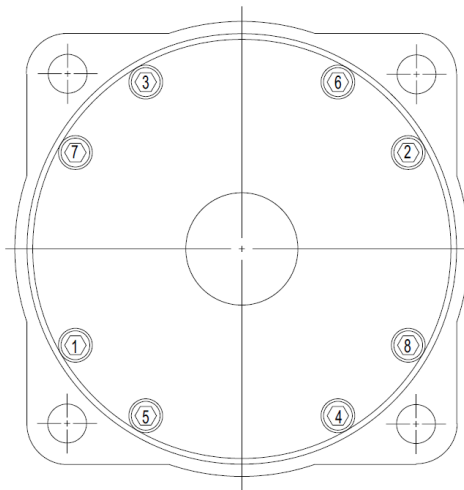


Figure 6

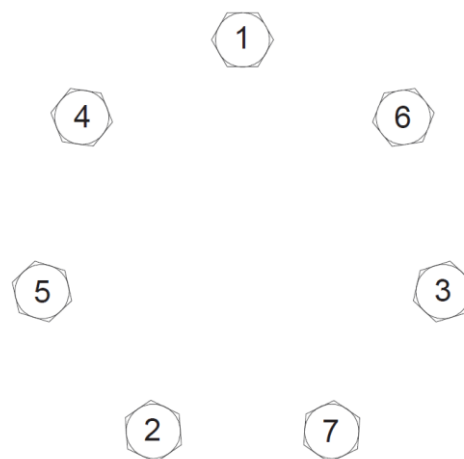


Figure 7

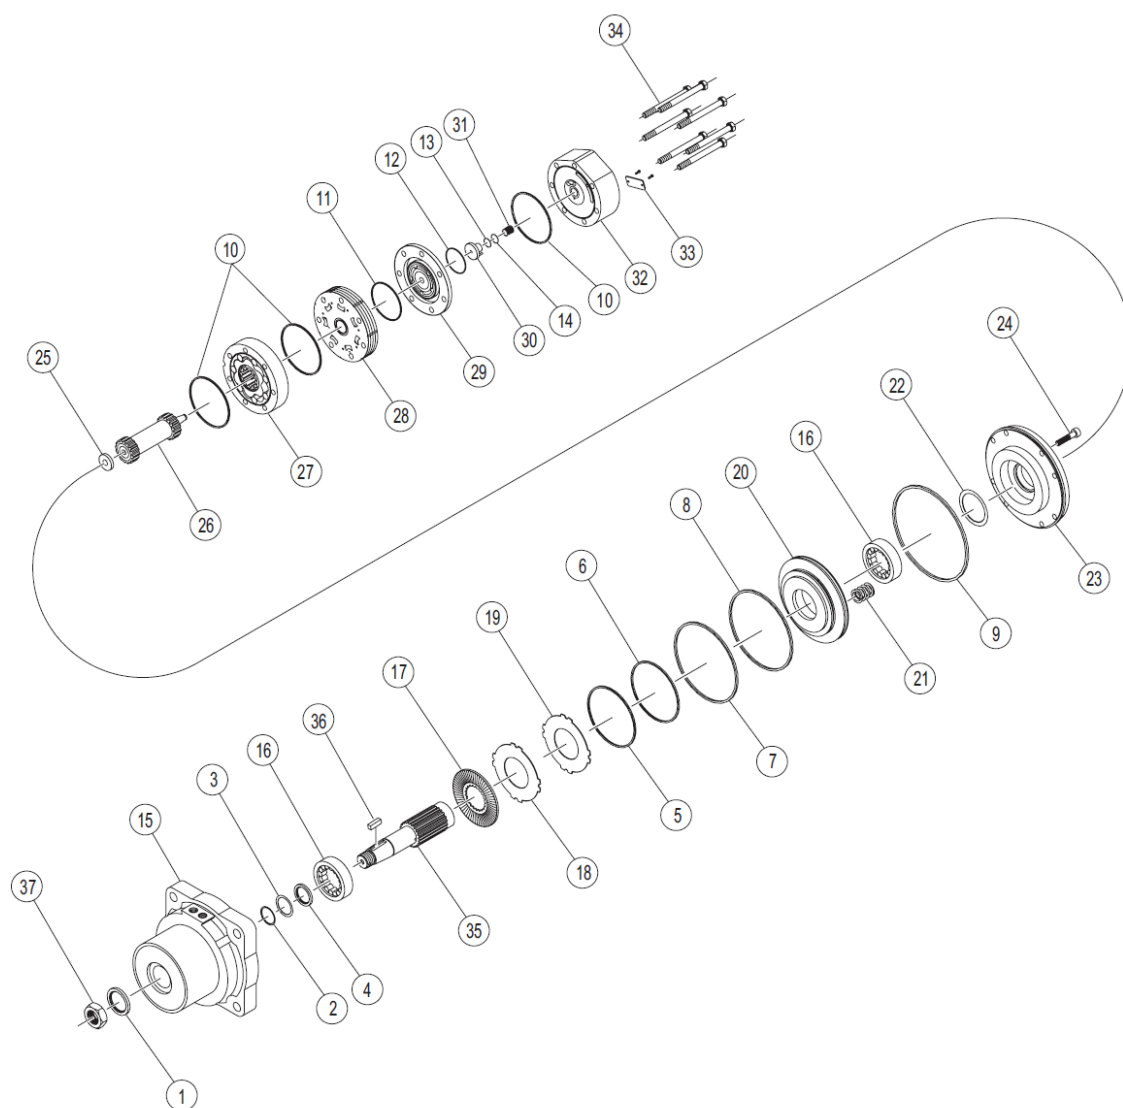


Figure 8 Exploded view

Parts list

Pos.	Part name
1	Dust Seal
2	Metal Backup Shim
3	Backup seal
4	Shaft Seal
5*	Small Piston O-Ring Seal
6*	Small Piston Seal
7*	Large Piston O-Ring Seal
8*	Large Piston Seal
9*	O-Ring Seal
10*	Body Seals (3)
11*	Manifold Seal
12*	Commutator Seal
13*	O-Ring Seal
14*	Backup Seal
15	Housing
16	Shaft Bearing
17*	Friction Disks (11)
18*	Disk Stampings (10) (9-.050;1-.030)
19*	Thick Disk Stampings (4) (.070)
20	Piston
21	Springs (25)
22	Spacer Shims (1-3)
23	Rear Housing
24	Capscrews (8)
25	Drive Link Spacer
26	Drive Link
27	Rotor Assembly
28	Manifold
29	Commutator Assembly
30	Endcover Piston
31	Piston Spring
32	Endcover
33	I.D. Tag Assembly
34	Assembly Bolts (7)
35	Shaft
36	Shaft Key
37	Shaft Nut
* Contained in seal kit PW80506	

Table 2 Parts list

Figures

Figure 1	7
Figure 2	7
Figure 3	7
Figure 4 Exploded view.....	8
Figure 5	13
Figure 6	13
Figure 7	13
Figure 8 Exploded view.....	14

Tables

Table 1 Parts list.....	9
Table 2 Parts list.....	15



White Drive Motors & Steering, LLC
110 Bill Bryan Blvd, Hopkinsville, Kentucky, 42240

White Drive Motors and Steering sp. z o.o.
ul. Logistyczna 1, Bielany Wrocławskie, 55-040 Kobierzyce

whitedriveproducts.com